


product information

model 4020



moveable armrest

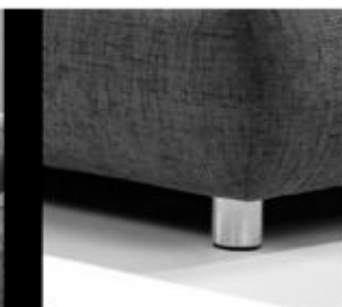

aluminium foot satined



moveable backrest



bullfrog ^{OS}
GERMANY


www.bullfrog-design.com

model 4020

design by kurt beier



Enjoy pure cosiness in this beautiful sofa programm. Forget the stress and make yourself comfortable. Change the seat depth with the flappable backrest and enjoy the feeling of relaxing beneath a canopy. The oasis to relax in your living room, soft forms paired with functions induce to dream...

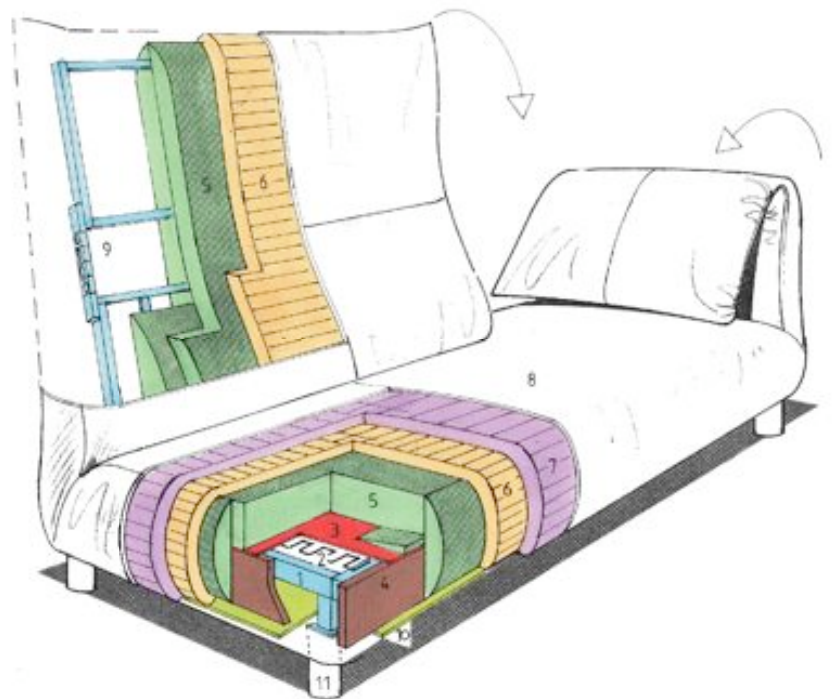


quality in detail!

- 1 - Metal frame
- 2 - Nosag steel springs
- 3 - Nosag covering made of polyvlies
- 4 - Plywood frame
- 5 - Polyfoam
- 6 - 300 g/m² fleece glued
- 7 - 225 g/m² fleece sewed to the cover
- 8 - Cover
- 9 - Backrest:
continuously adjustable
- 10 - Typar as bottom closing
- 11 - Aluminium foot


model 4020

design by kurt beier

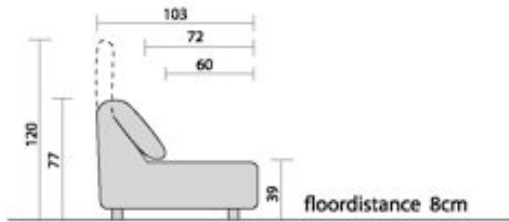


side view


aluminium foot 589 satined

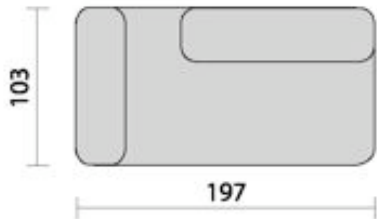


sofa 2-seat left
moveable backrest
220

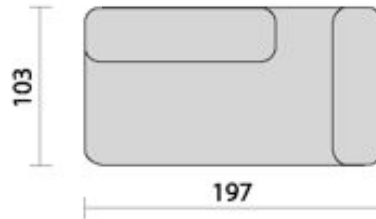


sofa 2-seat right
moveable backrest
210

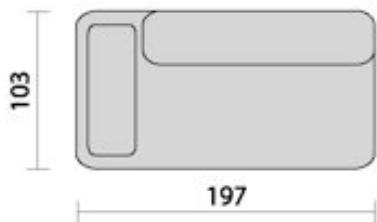


sofa 2-seat left
backrest + armrest moveable
218

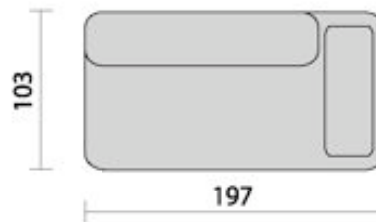


sofa 2-seat right
backrest + armrest moveable
217

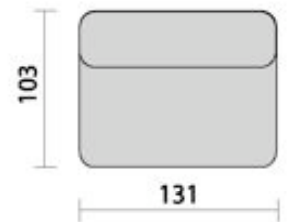


element
backrest moveable
130

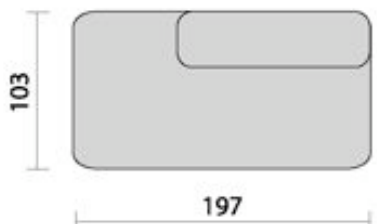


ottoman 2-seat left
backrest moveable
246

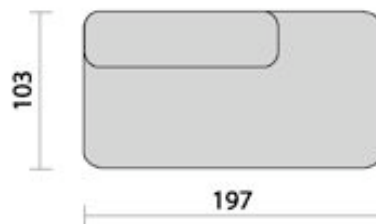

ottoman 2-seat right
backrest moveable
245

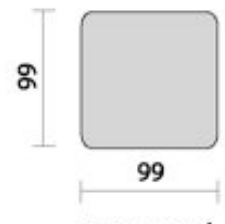


corner stool
560

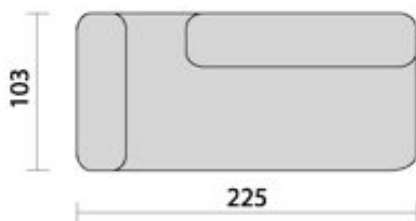

sofa 2,5-seat left
backrest moveable
258




sofa 2,5-seat right
backrest moveable
257

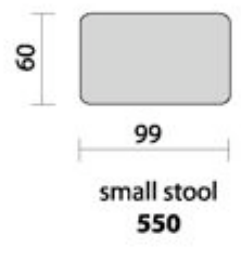

small stool
550

model 4020


design by kurt beier

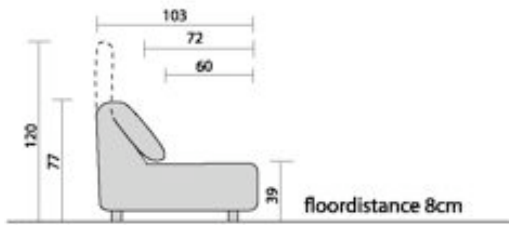


side view

aluminium foot 589 satined



element with
pendingfunction
for dynamic
Sitting

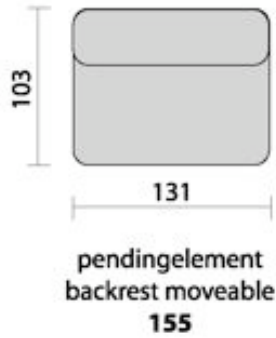

armrest roll
644

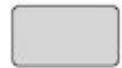


cushion
ca. 70 x 40 cm
519

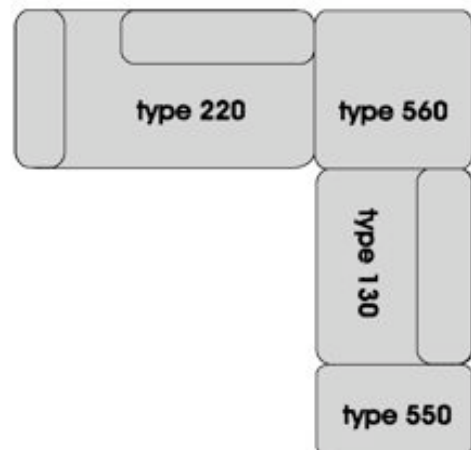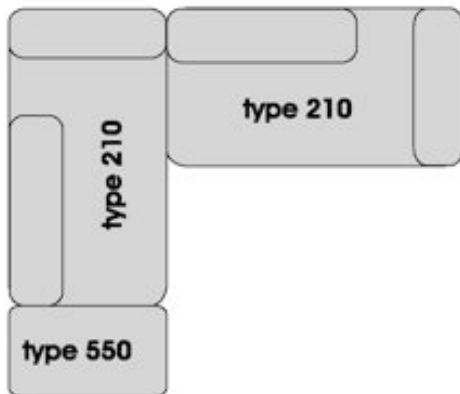



model 4020

design by kurt beier

Assembly instruction

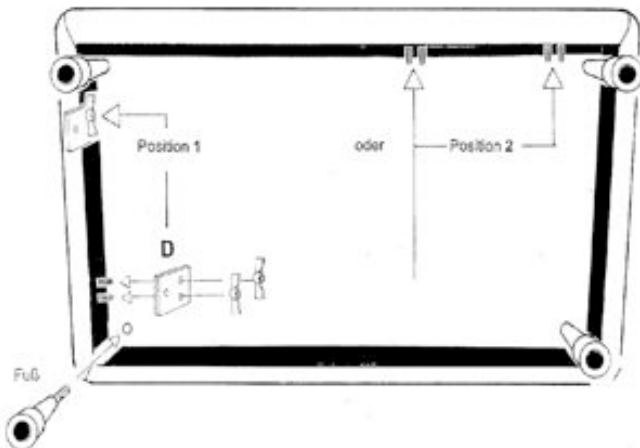

1. Lay the seat on the backrest.
2. To connect the seats put the plates **D** on the headless pins and fasten the wing screws. The connector plates of the footstools are pre-assembled.
3. Put the seats in your desired set-up.
4. Put the headless pin with the stern handle through the holes of the connector plates **D** and fasten all with sternhandle **E**.

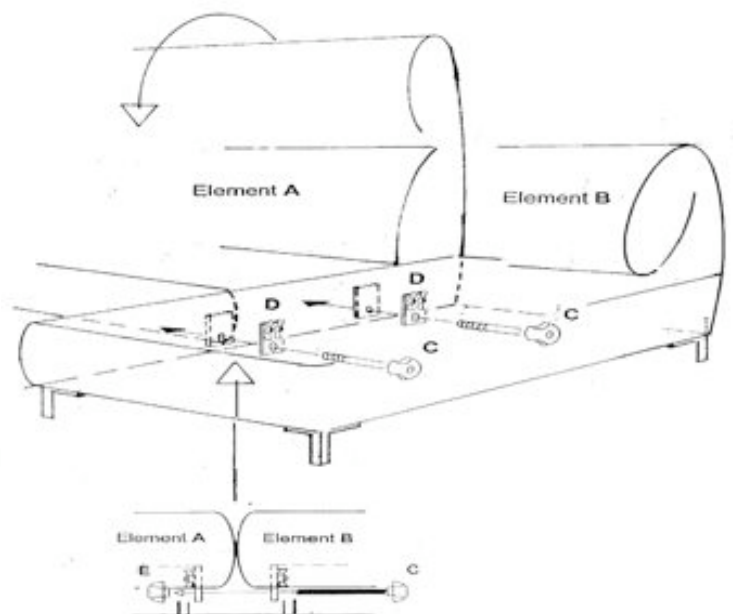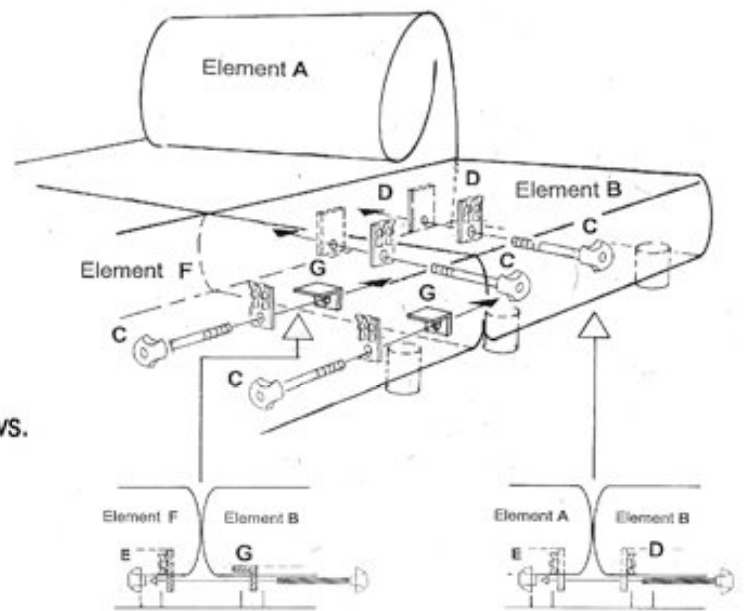

The seat depth and the backrest height can be adjusted variable by the moveable backrest!!!